

Gelb - Neu Wareneingang

| Model        | Artikel-Nummer              | EAN-Code                        | Bezeichnung  |
|--------------|-----------------------------|---------------------------------|--|
| HTC          | LTHTG2SWF                   | 4024559390524                   | LT/Case, HTC Dream/Vodafone G2<br>T-Mobile MyTouch 3G/Vodafone -/Google G2 |
|              | LTHTRDRAGONSWF              | 4024559390739                   | LT/Case, HTC Google Nexus One<br>(HTC Passion)                             |
|              | LTHTHDMSWF<br>(HTC Photon)  | 4024559390791                   | LT/Case, HTC HD mini<br>(HTC Photon)                                       |
|              | LTHTTATTOOSWF<br>LTHTTD2SWF | 4024559390708<br>4024559390531  | LT/Case, HTC Tattoo<br>LT/Case, HTC Touch Diamond2/XDA Diamond2            |
| LG           | LTLGBL20SWF                 | 4024559347368                   | LT/Case, Fun LG BL20 New Chocolate   |
|              | LTLGBL40SWF                 | 4024559347313                   | LT/Case, Fun II LG BL40 New Chocolate                                      |
|              | LTLGGD510SWF                | 4024559347450                   | LT/Case, Fun II LG GD510 Pop   |
|              | LTLGGM310SWF                | 4024559347283                   | LT/Case, Fun II LG GM310   |
|              | LTLGGT505SWF                | 4024559347498                   | LT/Case, Fun LG GT505 Pathfinder   |
|              | LTLGKE850SWF                | 4024559340598                   | LT/Case, Fun II LG_KE850_Prada   |
|              | LTLGKF300SWF                | 4024559340765                   | LT/Case, Fun II LG_KF300   |
|              | LTLGKF600SWF                | 4024559340727                   | LT/Case, Fun II LG_KF600   |
|              | LTLGKF700SWF                | 4024559340840                   | LT/Case, Fun II LG_KF700   |
|              | LTLGKF750SWF                | 4024559340796                   | LT/Case, Fun II LG_KF750 Secret  |
|              | LTLGCHOCOLATESWF            | 4024559340444                   | LT/Case, Fun II LG_KG800/Chocolate   |
|              | LTLGCHOCOLATEK810           | 4024559340499                   | LT/Case, Fun II LG_KG810   |
|              | LTLGKM500SWF                | 4024559340888                   | LT/Case, Fun II LG_KM500   |
|              | LTLGKM900SWF                | 4024559341236                   | LT/Case, Fun II LG_KM900 Arena   |
|              | LTLGKP100SWF                | 4024559340871                   | LT/Case, Fun II LG_KP100   |
|              | LTLGKP230SWF                | 4024559340857                   | LT/Case, Fun II LG_KP230   |
| LTLGKP500SWF | 4024559347269               | LT/Case, Fun II LG_KP500        |  |
| LTLGKS20SWF  | 4024559340628               | LT/Case, Fun II LG_KS20         |  |
| Motorola     | LTMOC116SWF                 | 4024559104015                   | LT/Case, Fun II Mo_C116/C118/C139  |
|              | LTMOE1070SWF                | 4024559104978                   | LT/Case, Fun II Mo_E1070   |
|              | LTMOF3SWF                   | 4024559105234                   | LT/Case, Fun II Mo_F3  |
|              | LTMOK1SWF                   | 4024559105081                   | LT/Case, Fun II Mo_K1  |
|              | LTMOK3SWF                   | 4024559105258                   | LT/Case, Fun II Mo_KRZR K3   |
|              | LTMOL6SWF                   | 4024559104817                   | LT/Case, Fun II Mo_L6/L7   |
|              | LTMOL9SWF                   | 4024559105494                   | LT/Case, Fun II Mo_L9  |
|              | LTMOMILSWF                  | 4024559105937                   | LT/Case, Fun II Mo_Milestone/Droid   |
|              | LTMOU9SWF                   | 4024559105579                   | LT/Case, Fun II Mo_U9 MOTO   |
|              | LTMOV300SWF                 | 4024559103964                   | LT/Case, Fun II Mo_V300  |
|              | LTMOV525SWF                 | 4024559103599                   | LT/Case, Fun II Mo_V525/300/550/620  |
|              | LTMOV8SWF                   | 4024559105371                   | LT/Case, Fun II Mo_RAZR2 V8  |
|              | LTMOV9SWF                   | 4024559105609                   | LT/Case, Fun II Mo_V9  |
|              | LTMOV980SWF                 | 4024559104237                   | LT/Case, Fun II Mo_V980  |
|              | LTMOW220SWF                 | 4024559105166                   | LT/Case, Fun II Mo_W220  |
|              | LTMOW230SWF                 | 4024559105784                   | LT/Case, Fun II Mo_230   |
|              | LTMOW377SWF                 | 4024559105791                   | LT/Case, Fun II Mo_377   |
|              | LTMOZ6SWF                   | 4024559105395                   | LT/Case, Fun II MOTOROKR Mo_Z6   |
| LTMOZ8SWF    | 4024559105531               | LT/Case, Fun II Mo_MOTORIZR Z8  |  |
| LTMOZN5SWF   | 4024559105814               | LT/Case, Fun II Mo_ZN5 Motozine |  |
| Nokia        | LTNO1200SWF                 | 4024559385612                   | LT/Case, Fun II No_1200/1208   |
|              | LTNO1209SWF                 | 4024559387210                   | LT/Case, Fun II No_1209  |

| Model | Artikel-Nummer     | EAN-Code             | Bezeichnung  |
|-------|--------------------|----------------------|--|
|       | LTNO1600SWF        | 4024559383571        | LT/Case, Fun II No_1600/1110/1110i/1112<br>1600/1110/1110i/1112/1100/2300/2100 |
|       | <b>LTNO1616SWF</b> | <b>4024559388378</b> | <b>LT/Case, Fun II No_1616</b>   |
|       | LTNO1650SWF        | 4024559386367        | LT/Case, Fun II No_1650  |
|       | LTNO1661SWF        | 4024559388088        | LT/Case, Fun II No_1661  |
|       | LTNO1680CSWF       | 4024559386749        | LT/Case, Fun II No_1680 Classic  |
|       | LTNO2200SSWF       | 4024559388316        | LT/Case, Fun II No_2200 Slide  |
|       | LTNO2310SWF        | 4024559384509        | LT/Case, Fun II No_2310  |
|       | LTNO2330SWF        | 4024559387999        | LT/Case, Fun II No_2330/2323   |
|       | LTNO2600CSWF       | 4024559386947        | LT/Case, Fun II No_2600 Classic  |
|       | LTNO2600SWF        | 4024559383021        | LT/Case, Fun II No_2600  |
|       | LTNO2610SWF        | 4024559384356        | LT/Case, Fun II No_2610  |
|       | LTNO2626SWF        | 4024559385797        | LT/Case, Fun II No_2626  |
|       | LTNO2630SWF        | 4024559386114        | LT/Case, Fun II No_2630  |
|       | LTNO2680SSWF       | 4024559386756        | LT/Case, Fun II No_2680 Slide  |
|       | LTNO2700SWF        | 4024559388057        | LT/Case, Fun II No_2700  |
|       | LTNO2730SWF        | 4024559388064        | LT/Case, Fun II No_2730  |
|       | LTNO2760SWF        | 4024559386763        | LT/Case, Fun II No_2760  |
|       | LTNO3110CSWF       | 4024559385346        | LT/Case, Fun No_3109 / 3110 Classic  |
|       | LTNO3120CSWF       | 4024559346873        | LT/Case, Fun II No_3120 Classic  |
|       | LTNO3230SWF        | 4024559383267        | LT/Case, Fun II No_3230  |
|       | LTNO3410SWF2       | 4024559129827        | LT/Case, Fun II No_3410/3310/3330  |
|       | LTNO3500CSWF       | 4024559385919        | LT/Case, Fun II No_3500 Classic  |
|       | LTNO3600SSWF       | 4024559386770        | LT/Case, Fun II No_3600 Slide  |
|       | LTNO3720SWF        | 4024559388118        | LT/Case, Fun II No_3720  |
|       | LTNO5030XRSWF      | 4024559387111        | LT/Case, Fun II No_5030 XpressRadio  |
|       | LTNO5070SWF        | 4024559385308        | LT/Case, Fun No_5070   |
|       | LTNO5100SWF2       | 4024559381362        | LT/Case, Fun II No_5100  |
|       | LTNO5130XMSWF      | 4024559387920        | LT/Case, Fun II No_5130 XpressMusic  |
|       | LTNO5140SWF        | 4024559382680        | LT/Case, Fun II No_5140  |
|       | LTNO5220SWF        | 4024559386794        | LT/Case, Fun II No_5220  |
|       | LTNO5310SWF        | 4024559385926        | LT/Case, Fun II No_5310  |
|       | LTNO5320SWF        | 4024559386800        | LT/Case, Fun II No_5320  |
|       | LTNO5500SWF        | 4024559384622        | LT/Case, Fun II No_5500  |
|       | LTNO5610SWF        | 4024559385933        | LT/Case, Fun II No_5610 XpressMusic  |
|       | LTNO5630XMSWF      | 4024559387821        | LT/Case, Fun II No_5630 XpressMusic  |
|       | LTNO5730XMSWF      | 4024559387814        | LT/Case, Fun II No_5730 XpressMusic  |
|       | LTNO5800SWF        | 4024559387135        | LT/Case, Fun II No_5800 XpressMusic  |
|       | LTNO6020SWF        | 4024559383236        | LT/Case, Fun II No_6020/6021   |
|       | LTNO6030SWF        | 4024559383540        | LT/Case, Fun II No_6030  |
|       | LTNO6070SWF        | 4024559384516        | LT/Case, Fun II No_6070  |
|       | LTNO6080SWF        | 4024559385117        | LT/Case, Fun II No_6080  |
|       | LTNO6085SWF        | 4024559385148        | LT/Case, Fun II No_6085  |
|       | LTNO6100SWF2       | 4024559380945        | LT/Case, Fun II No_6100/3100/2626  |
|       | LTNO6101SWF        | 4024559383496        | LT/Case, Fun II No_6101  |
|       | LTNO6110NSWF       | 4024559385353        | LT/Case, Fun No_6110 Navigator   |
|       | LTNO6120CSWF       | 4024559385490        | LT/Case, Fun II No_6120 Classic  |
|       | LTNON6131SWF       | 4024559384332        | LT/Case, Fun II No_6131/6132   |
|       | LTNO6151SWF        | 4024559384820        | LT/Case, Fun II No_6151  |
|       | LTNO6210NSWF       | 4024559387265        | LT/Case, Fun II No_6210 Navigator  |
|       | LTNO6210SWF2       | 4024559127977        | LT/Case, Fun II No_6210/6310   |
|       | LTNO6220CSWF       | 4024559387012        | LT/Case, Fun II No_6220 Classic  |
|       | LTNO6230SWF        | 4024559382529        | LT/Case, Fun II No_6230  |
|       | LTNO6233SWF        | 4024559384561        | LT/Case, Fun II No_6233_6234   |
|       | LTNO6260SWF        | 4024559387142        | LT/Case, Fun II No_6260 Slide  |
|       | LTNO6267SWF        | 4024559385704        | LT/Case, Fun II No_6267  |
|       | LTNO6270SWF        | 4024559383786        | LT/Case, Fun II No_6270  |
|       | LTNO6280SWF        | 4024559384134        | LT/Case, Fun II No_6280  |
|       | LTNO6300SWF        | 4024559385162        | LT/Case, Fun II No_6300 / 6301   |

| Model   | Artikel-Nummer      | EAN-Code             | Bezeichnung                         |
|---------|---------------------|----------------------|-------------------------------------|
|         | LTNO6303SWF         | 4024559387845        | LT/Case, Fun II No_6303(i)          |
|         | LTNO6500CSWF        | 4024559385957        | LT/Case, Fun II No_6500 Classic     |
|         | LTNO6500SSWF        | 4024559383854        | LT/Case, Fun II No_6500 Slide       |
|         | LTNO6555SWF         | 4024559385865        | LT/Case, Fun II No_6555             |
|         | LTNO6600FSWF        | 4024559386824        | LT/Case, Fun II No_6600 Fold        |
|         | LTNO6600SWF         | 4024559382185        | LT/Case, Fun II No_6600             |
|         | LTNO6600SSWF        | 4024559386831        | LT/Case, Fun II No_6600(i) Slide    |
|         | LTNO6630SWF         | 4024559383069        | LT/Case, Fun II No_6630             |
|         | LTNO6700CSWF        | 4024559387906        | LT/Case, Fun II No_6700 Classic     |
|         | <b>LTNO6700SSWF</b> | <b>4024559388408</b> | <b>LT/Case, Fun II No_6700 S</b>    |
|         | LTNO6710NSWF        | 4024559387852        | LT/Case, Fun II No_6710 Navigator   |
|         | LTNO6720CSWF        | 4024559387173        | LT/Case, Fun II No_6720 Classic     |
|         | LTNO6730SWF         | 4024559388071        | LT/Case, Fun II No_6730             |
|         | LTNO7070SWF         | 4024559386848        | LT/Case, Fun II No_7070             |
|         | LTNO7280SWF         | 4024559385773        | LT/Case, Fun II No_7280             |
|         | LTNO7310CSWF        | 4024559346880        | LT/Case, Fun II No_7310 SuperNova   |
|         | LTNO7360SWF         | 4024559383960        | LT/Case, Fun II No_7360             |
|         | LTNO7373SWF         | 4024559385100        | LT/Case, Fun II No_7373             |
|         | LTNO7380SWF         | 4024559383922        | LT/Case, Fun II No_7380             |
|         | LTNO7600SWF         | 4024559382420        | LT/Case, Fun II No_7600             |
|         | LTNO8600SWF         | 4024559385322        | LT/Case, Fun II No_8600             |
|         | LTNO8800SWF         | 4024559384028        | LT/Case, Fun II No_8800             |
|         | LTNOC3SWF           | 4024559388392        | LT/Case, Fun II No_C3               |
|         | LTNOC5SWF           | 4024559388422        | LT/Case, Fun II No_C5               |
|         | LTNOE50SWF          | 4024559384301        | LT/Case, Fun II No_E50              |
|         | LTNOE51SWF          | 4024559385964        | LT/Case, Fun II No_E51              |
|         | LTNOE61SWF          | 4024559384349        | LT/Case, Fun II No_E61              |
|         | LTNOE63SWF          | 4024559387395        | LT/Case, Fun II No_E63              |
|         | LTNOE65SWF          | 4024559385278        | LT/Case, Fun II No_E65              |
|         | LTNOE70SWF          | 4024559384585        | LT/Case, Fun II No_E70              |
|         | LTNOE71SWF          | 4024559387890        | LT/Case, Fun II No_E71              |
|         | LTNOE75SWF          | 4024559387876        | LT/Case, Fun II No_E75              |
|         | LTNOE90SWF          | 4024559385537        | LT/Case, Fun II No_E90              |
|         | LTNON70SWF          | 4024559384110        | LT/Case, Fun II No_N-70/6680        |
|         | LTNON71SWF          | 4024559384325        | LT/Case, Fun II No_N-71             |
|         | LTNON77SWF          | 4024559385315        | LT/Case, Fun II No_N-77             |
|         | LTNON78SWF          | 4024559386862        | LT/Case, Fun II No_N78              |
|         | LTNON79SWF          | 4024559387234        | LT/Case, Fun II No_N79              |
|         | LTNON80SWF          | 4024559384318        | LT/Case, Fun II No_N-80             |
|         | LTNON81SWF          | 4024559384615        | LT/Case, Fun II No_N-81 / N81 8GB   |
|         | LTNON85SWF          | 4024559387319        | LT/Case, Fun II No_N-85             |
|         | LTNON86SWF          | 4024559387883        | LT/Case, Fun II No_N86              |
|         | LTNON900SWF         | 4024559388415        | LT/Case, Fun II No_N900             |
|         | LTNON93SWF          | 4024559384745        | LT/Case, Fun II No_N-93             |
|         | LTNON96SWF          | 4024559386473        | LT/Case, Fun II No_N-96             |
|         | LTNON97MSWF         | 4024559388132        | LT/Case, Fun II No_N97 Mini         |
|         | <b>LTNOX3SWF</b>    | <b>4024559388385</b> | <b>LT/Case, Fun II No_X3</b>        |
| Sagem   | LTSAX6DSWF          | 4024559171123        | LT/Case, Fun II Sag_ MyX-6          |
|         | LTSAGMyX700SWF      | 4024559171642        | LT/Case, Fun Sag_ MyX-700           |
| Samsung | LTSAB2100SWF        | 4024559513114        | LT/Case, Fun II Sam_ B2100          |
|         | LTSAB5722SWF        | 4024559513350        | LT/Case, Fun II Sam_ B5722          |
|         | LTSAC140SWF         | 4024559189715        | LT/Case, Fun II Sam_ C140/C120/C130 |
|         | LTSAMC170SWF        | 4024559189920        | LT/Case, Fun II Sam_ C170/C180      |
|         | LTSAC300SWF         | 4024559183492        | LT/Case, Fun Sam_ C300              |
|         | LTSAD780SWF         | 4024559511769        | LT/Case, Fun II Sam_D780            |
|         | LTSAMD900SWF        | 4024559510557        | LT/Case, Fun Sam_ D900/D900i/D900e  |
|         | LTSAE480SWF         | 4024559511349        | LT/Case, Fun II Sam_ E480           |

| Model         | Artikel-Nummer | EAN-Code      | Bezeichnung  |
|---------------|----------------|---------------|--|
|               | L TSAE590SWF   | 4024559511783 | LT/Case, Fun II Sam_ E590                            |
|               | L TSAE600SWF   | 4024559181870 | LT/Case, Fun II Sam_ E600                            |
|               | L TSAE730SWF   | 4024559182976 | LT/Case, Fun II Sam_ E730/E500                       |
|               | L TSAE950SWF   | 4024559511790 | LT/Case, Fun II Sam_ E950                            |
|               | L TSAF210SWF   | 4024559511127 | LT/Case, Fun II Sam_ F200, F210                      |
|               | L TSAF300SWF   | 4024559189890 | LT/Case, Fun II Sam_ F300                            |
|               | L TSAF330SWF   | 4024559511134 | LT/Case, Fun II Sam_ F330                            |
|               | L TSAF400SWF   | 4024559512391 | LT/Case, Fun II Sam_ F400                            |
|               | L TSAF490SWF   | 4024559511448 | LT/Case, Fun II Sam_ F490                            |
|               | L TSAF700SWF   | 4024559511806 | LT/Case, Fun II Sam_ F700                            |
|               | L TSAG400SWF   | 4024559512414 | LT/Case, Fun II Sam_ G400                            |
|               | L TSAG600SWF   | 4024559651083 | LT/Case, Fun II Sam_ G600                            |
|               | L TSAG810SWF   | 4024559512438 | LT/Case, Fun II Sam_ G810                            |
|               | L TSAI450SWF   | 4024559511325 | LT/Case, Fun II Sam_ i450                            |
|               | L TSAI550SWF   | 4024559511158 | LT/Case, Fun II Sam_ i550                            |
|               | L TSAI560SWF   | 4024559511868 | LT/Case, Fun II Sam_ i560                            |
|               | L TSAI600SWF   | 4024559189661 | LT/Case, Fun II Sam_ i600                            |
|               | L TSAI7500SWF  | 4024559513183 | LT/Case, Fun Sam_ I7500 Galaxy                       |
|               | L TSAI780SWF   | 4024559512582 | LT/Case, Fun II Sam_ i780                            |
|               | L TSAI8000SWF  | 4024559513169 | LT/Case, Fun Sam_ i8000 Omnia2                       |
|               | L TSAI8510SWF  | 4024559512452 | LT/Case, Fun II Sam_ i8510 Innov8                    |
|               | L TSAI8910SWF  | 4024559512902 | LT/Case, Fun II Sam_ i8910 Omina HD                  |
|               | L TSAI900SWF   | 4024559511905 | LT/Case, Fun II Sam_ i900                            |
|               | L TSAJ700SWF   | 4024559511363 | LT/Case, Fun II Sam_ J700                            |
|               | L TSAJ800SWF   | 4024559512094 | LT/Case, Fun II Sam_ J800                            |
|               | L TSAL700SWF   | 4024559512476 | LT/Case, Fun II Sam_ L700                            |
|               | L TSAL760SWF   | 4024559510854 | LT/Case, Fun II Sam_ L760                            |
|               | L TSAL870SWF   | 4024559511462 | LT/Case, Fun II Sam_ L870                            |
|               | L TSAM110SWF   | 4024559511295 | LT/Case, Fun II Sam_ M110                            |
|               | L TSAM300SWF   | 4024559189722 | LT/Case, Fun II Sam_ M300                            |
|               | L TSAM310SWF   | 4024559512070 | LT/Case, Fun II Sam_ M310                            |
|               | L TSAM3510SWF  | 4024559512698 | LT/Case, Fun II Sam_ M3510                           |
|               | L TSAP520SWF   | 4024559511813 | LT/Case, Fun II Sam_ P520 Armani                     |
|               | L TSAS3500SWF  | 4024559512940 | LT/Case, Fun II Sam_ S3500                           |
|               | L TSAS3650SWF  | 4024559513190 | LT/Case, Fun Sam_ S3650 Corby                        |
|               | L TSAS5200SWF  | 4024559513039 | LT/Case, Fun II Sam_ S5200                           |
|               | L TSAS5230SWF  | 4024559512926 | LT/Case, Fun II Sam_ S5230 Star                      |
|               | L TSAS5600SWF  | 4024559512919 | LT/Case, Fun II Sam_ S5600 Preston                   |
|               | L TSAS5620SWF  | 4024559513381 | LT/Case, Fun II Sam_ S5620 Monte                     |
|               | L TSAS7070SWF  | 4024559513374 | LT/Case, Fun II Sam_ S7070 Diva                      |
|               | L TSAS7350SWF  | 4024559512957 | LT/Case, Fun II Sam_ S7350 UltraSlide                |
|               | L TSAS8000SWF  | 4024559513176 | LT/Case, Fun Sam_ S8000 Jet<br>für S8000 Jet + S8003 |
|               | L TSAS8300SWF  | 4024559512964 | LT/Case, Fun II Sam_ S8300 UltraTouch                |
|               | L TSAMU600SWF  | 4024559189623 | LT/Case, Fun II Sam_ U600                            |
|               | L TSAU700SWF   | 4024559189753 | LT/Case, Fun II Sam_ U700                            |
|               | L TSAU900SWF   | 4024559511837 | LT/Case, Fun II Sam_ U900                            |
|               | L TSAX160SWF   | 4024559189630 | LT/Case, Fun II Sam_ X160                            |
|               | L TSAX660SWF   | 4024559510151 | LT/Case, Fun II Sam_ X660                            |
|               | L TSAMZ400SWF  | 4024559510649 | LT/Case, Fun II Sam_ Z400                            |
|               | L TSAMZM60SWF  | 4024559183133 | LT/Case, Fun II Sam_ ZM60                            |
| Siemens       | L TSIA65SWF    | 4024559196225 | LT/Case, Fun II Si_ A65/A70/AX75/A75                 |
|               | L TSISC55SWF2  | 4024559194672 | LT/Case, Fun II Si_ C/A/M/S55/A52/A57                |
| Sony-Ericsson | LTSEC510SWF    | 4024559066399 | LT/Case, Fun II Son_ C510                            |
|               | LTSEC702SWF    | 4024559065651 | LT/Case, Fun II Son_ C702                            |
|               | LTSEC902SWF    | 4024559065668 | LT/Case, Fun II Son_ C902                            |
|               | LTSEELMSWF     | 4024559067112 | LT/Case, Fun II Son_ Elm                             |

| Model | Artikel-Nummer | EAN-Code      | Bezeichnung                         |
|-------|----------------|---------------|-------------------------------------|
|       | LTSEF100SWF    | 4024559067068 | LT/Case, Fun II Son_ F100 Jalou     |
|       | LTSEG502SWF    | 4024559065637 | LT/Case, Fun II Son_ G502           |
|       | LTSEG700SWF    | 4024559065811 | LT/Case, Fun II Son_ G700           |
|       | LTSEG900SWF    | 4024559065842 | LT/Case, Fun II Son_ G900           |
|       | LTSEJ220SWF    | 4024559064142 | LT/Case, Fun II Son_ J220           |
|       | LTSEK300SWF    | 4024559063534 | LT/Case, Fun II Son_ K300           |
|       | LTSEK530SWF    | 4024559065187 | LT/Case, Fun II Son_ K530i          |
|       | LTSEK550SWF    | 4024559064661 | LT/Case, Fun II Son_ K550i          |
|       | LTSEK610SWF    | 4024559064319 | LT/Case, Fun II Son_ K610/V630      |
|       | LTSEK630SWF    | 4024559065217 | LT/Case, Fun II Son_ K630i          |
|       | LTSEK660SWF    | 4024559065446 | LT/Case, Fun II Son_ K660i          |
|       | LTSEK750SWF    | 4024559063640 | LT/Case, Fun II Son_ K750           |
|       | LTSEK770SWF    | 4024559065248 | LT/Case, Fun II Son_ K770i          |
|       | LTSEK800SWF    | 4024559064272 | LT/Case, Fun II Son_ K800i          |
|       | LTSEK810SWF    | 4024559064715 | LT/Case, Fun II Son_ K810           |
|       | LTSEK850SWF    | 4024559065354 | LT/Case, Fun II Son_ K850i          |
|       | LTSEP1iSWF     | 4024559064920 | LT/Case, Fun II Son_ P1i            |
|       | LTSEP990SWF    | 4024559064494 | LT/Case, Fun II Son_ P990           |
|       | LTSER306SWF    | 4024559066122 | LT/Case, Fun II Son_ R306           |
|       | LTSES500SWF    | 4024559064784 | LT/Case, Fun II Son_ S500i          |
|       | LTSET250SWF    | 4024559065293 | LT/Case, Fun II Son_ T250i/T280i    |
|       | LTSET303SWF    | 4024559066245 | LT/Case, Fun II Son_ T303           |
|       | LTSET700SWF    | 4024559066108 | LT/Case, Fun II Son_ T700           |
|       | LTSET707SWF    | 4024559066368 | LT/Case, Fun II Son_ T707           |
|       | LTSEU1SWF      | 4024559067044 | LT/Case, Fun II Son_ U1 Saito       |
|       | LTSEU100SWF    | 4024559067051 | LT/Case, Fun II Son_ U100 Yari      |
|       | LTSEVIVAZSWF   | 4024559067105 | LT/Case, Fun II Son_ U5 Vivaz/Kuara |
|       | LTSEW200SWF    | 4024559064890 | LT/Case, Fun II Son_ W200i          |
|       | LTSEW302SWF    | 4024559066085 | LT/Case, Fun II Son_ W302           |
|       | LTSEW350SWF    | 4024559065873 | LT/Case, Fun II Son_ W350           |
|       | LTSEW380SWF    | 4024559065422 | LT/Case, Fun II Son_ W380i          |
|       | LTSEW508SWF    | 4024559066375 | LT/Case, Fun II Son_ W508           |
|       | LTSEW580SWF    | 4024559064906 | LT/Case, Fun II Son_ W580i          |
|       | LTSEW595SWF    | 4024559066146 | LT/Case, Fun II Son_ W595           |
|       | LTSEW610SWF    | 4024559064722 | LT/Case, Fun II Son_ W610           |
|       | LTSEW710SWF    | 4024559364488 | LT/Case, Fun II Son_ W710i          |
|       | LTSEW715SWF    | 4024559066382 | LT/Case, Fun II Son_ W715           |
|       | LTSEW760SWF    | 4024559065675 | LT/Case, Fun II Son_ W760           |
|       | LTSEW800SWF    | 4024559063831 | LT/Case, Fun II Son_ W800/W700/D750 |
|       | LTSEW810iSWF   | 4024559064159 | LT/Case, Fun II Son_ W810i          |
|       | LTSEW880SWF    | 4024559064685 | LT/Case, Fun II Son_ W880i          |
|       | LTSEW890SWF    | 4024559065576 | LT/Case, Fun II Son_ W890i          |
|       | LTSEW902SWF    | 4024559066160 | LT/Case, Fun II Son_ W902           |
|       | LTSEW910iSWF   | 4024559064340 | LT/Case, Fun So/Er_ W910i           |
|       | LTSEW960iSWF   | 4024559064814 | LT/Case, Fun II Son_ W960i          |
|       | LTSEW980SWF    | 4024559065408 | LT/Case, Fun II Son_ W980i          |
|       | LTSEX10SWF     | 4024559067129 | LT/Case, Fun II Son_ X10            |
|       | LTSEX2SWF      | 4024559067136 | LT/Case, Fun II Son_ X2             |
|       | LTSEZ310SWF    | 4024559065088 | LT/Case, Fun II Son_ Z310           |
|       | LTSEZ320SWF    | 4024559065132 | LT/Case, Fun II Son_ Z320           |
|       | LTSEZ555SWF    | 4024559065491 | LT/Case, Fun II Son_ Z555           |
|       | LTSEZ710iSWF   | 4024559064449 | LT/Case, Fun II Son_ Z710i          |
|       | LTSEZ777SWF    | 4024559065507 | LT/Case, Fun II Son_ Z770           |