

Gelb - Neu Wareneingang

Model	Artikel-Nummer	EAN-Code	Bezeichnung
HTC	LTHTRDRAGONSWF	4024559390739	LT/Case, Fun II HTC Google Nexus One (HTC Passion)
	LHTHG2SWF	4024559390524	LT/Case, HTC Dream/Vodafone G2 T-Mobile MyTouch 3G/Vodafone -/Google G2
	LTHTHDMSWF	4024559390791	LT/Case, HTC HD mini (HTC Photon)
	LHTTTATTOOSWF LHTTTD2SWF	4024559390708 4024559390531	LT/Case, HTC Tattoo LT/Case, HTC Touch Diamond2/XDA Diamond2
LG	LTLGBL20SWF	4024559347368	LT/Case, Fun LG BL20 New Chocolate
	LTLGBL40SWF	4024559347313	LT/Case, Fun II LG BL40 New Chocolate
	LTLGCHOCOLATEKG810	4024559340499	LT/Case, Fun II LG KG810
	LTLGCHOCOLATESWF	4024559340444	LT/Case, Fun II LG KG800/Chocolate
	LTLGGD510SWF	4024559347450	LT/Case, Fun II LG GD510 Pop
	LTLGGM310SWF	4024559347283	LT/Case, Fun II LG GM310
	LTLGGT505SWF	4024559347498	LT/Case, Fun LG GT505 Pathfinder
	LTLGKE850SWF	4024559340598	LT/Case, Fun II LG_KE850_Prada
	LTLGKF300SWF	4024559340765	LT/Case, Fun II LG KF300
	LTLGKF600SWF	4024559340727	LT/Case, Fun II LG_KF600
	LTLGKF700SWF	4024559340840	LT/Case, Fun II LG KF700
	LTLGKF750SWF	4024559340796	LT/Case, Fun II LG KF750 Secret
	LTLGKM500SWF	4024559340888	LT/Case, Fun II LG_KM500
	LTLGKM900SWF	4024559341236	LT/Case, Fun II LG_KM900 Arena
	LTLGKP100SWF	4024559340871	LT/Case, Fun II LG_KP100
	LTLGKP230SWF	4024559340857	LT/Case, Fun II LG_KP230
LTLGKP500SWF	4024559347269	LT/Case, Fun II LG_KP500	
LTLGKS20SWF	4024559340628	LT/Case, Fun II LG KS20	
Motorola	LTMOE1070SWF	4024559104978	LT/Case, Fun II Mo_E1070
	LTMOK1SWF	4024559105081	LT/Case, Fun II Mo_K1
	LTMOK3SWF	4024559105258	LT/Case, Fun II Mo_KRZR K3
	LTMOL6SWF	4024559104817	LT/Case, Fun II Mo_L6/L7
	LTMOL9SWF	4024559105494	LT/Case, Fun II Mo_L9
	LTMOMILSWF	4024559105937	LT/Case, Fun II Mo_Milestone/Droid
	LTMOV300SWF	4024559103964	LT/Case, Fun II Mo_V300
	LTMOV525SWF	4024559103599	LT/Case, Fun II Mo_V525/300/550/620
	LTMOV8SWF	4024559105371	LT/Case, Fun II Mo_RAZR2 V8
	LTMOV9SWF	4024559105609	LT/Case, Fun II Mo_V9
	LTMOW220SWF	4024559105166	LT/Case, Fun II Mo_W220
	LTMOW230SWF	4024559105784	LT/Case, Fun II Mo_230
	LTMOW377SWF	4024559105791	LT/Case, Fun II Mo_377
LTMOW6SWF	4024559105395	LT/Case, Fun II MOTOROKR Mo_Z6	

Model	Artikel-Nummer	EAN-Code	Bezeichnung
	LTMOZN5SWF	4024559105814	LT/Case, Fun II Mo_ZN5 Motozine
Nokia	LTNO1200SWF	4024559385612	LT/Case, Fun II No_1200/1208
	LTNO1209SWF	4024559387210	LT/Case, Fun II No_1209
	LTNO1600SWF	4024559383571	LT/Case, Fun II No_1600/1110/1110i/1112
	LTNO1616SWF	4024559388378	LT/Case, Fun II No_1616
	LTNO1650SWF	4024559386367	LT/Case, Fun II No_1650
	LTNO1661SWF	4024559388088	LT/Case, Fun II No_1661
	LTNO1680CSWF	4024559386749	LT/Case, Fun II No_1680 Classic
	LTNO2200SSWF	4024559388316	LT/Case, Fun II No_2200 Slide
	LTNO2310SWF	4024559384509	LT/Case, Fun II No_2310
	LTNO2330SWF	4024559387999	LT/Case, Fun II No_2330/2323
	LTNO2600CSWF	4024559386947	LT/Case, Fun II No_2600 Classic
	LTNO2600SWF	4024559383021	LT/Case, Fun II No_2600
	LTNO2610SWF	4024559384356	LT/Case, Fun II No_2610
	LTNO2626SWF	4024559385797	LT/Case, Fun II No_2626
	LTNO2630SWF	4024559386114	LT/Case, Fun II No_2630
	LTNO2680SSWF	4024559386756	LT/Case, Fun II No_2680 Slide
	LTNO2690SWF	4024559388583	LT/Case, Fun II No_2690
	LTNO2700SWF	4024559388057	LT/Case, Fun II No_2700
	LTNO2730SWF	4024559388064	LT/Case, Fun II No_2730
	LTNO2760SWF	4024559386763	LT/Case, Fun II No_2760
	LTNO3110CSWF	4024559385346	LT/Case, Fun II No_3109 / 3110 Classic
	LTNO3120CSWF	4024559346873	LT/Case, Fun II No_3120 Classic
	LTNO3230SWF	4024559383267	LT/Case, Fun II No_3230
	LTNO3410SWF2	4024559129827	LT/Case, Fun II No_3410/3310/3330
	LTNO3500CSWF	4024559385919	LT/Case, Fun II No_3500 Classic
	LTNO3600SSWF	4024559386770	LT/Case, Fun II No_3600 Slide
	LTNO3720SWF	4024559388118	LT/Case, Fun II No_3720
	LTNO5030XRSWF	4024559387111	LT/Case, Fun II No_5030 XpressRadio
	LTNO5070SWF	4024559385308	LT/Case, Fun II No_5070
	LTNO5100SWF2	4024559381362	LT/Case, Fun II No_5100
	LTNO5130XMSWF	4024559387920	LT/Case, Fun II No_5130 XpressMusic
	LTNO5140SWF	4024559382680	LT/Case, Fun II No_5140
	LTNO5220SWF	4024559386794	LT/Case, Fun II No_5220
	LTNO5230SWF	4024559388606	LT/Case, Fun II No_5230
	LTNO5233SWF	4024559388590	LT/Case, Fun II No_5233
	LTNO5250SWF	4024559388613	LT/Case, Fun II No_5250
	LTNO5310SWF	4024559385926	LT/Case, Fun II No_5310
	LTNO5320SWF	4024559386800	LT/Case, Fun II No_5320
	LTNO5500SWF	4024559384622	LT/Case, Fun II No_5500
	LTNO5610SWF	4024559385933	LT/Case, Fun II No_5610 XpressMusic
	LTNO5630XMSWF	4024559387821	LT/Case, Fun II No_5630 XpressMusic
	LTNO5730XMSWF	4024559387814	LT/Case, Fun II No_5730 XpressMusic
	LTNO5800SWF	4024559387135	LT/Case, Fun II No_5800 XpressMusic
	LTNO6070SWF	4024559384516	LT/Case, Fun II No_6070
	LTNO6080SWF	4024559385117	LT/Case, Fun II No_6080
	LTNO6085SWF	4024559385148	LT/Case, Fun II No_6085
	LTNO6100SWF2	4024559380945	LT/Case, Fun II No_6100/3100/2626
	LTNO6110NSWF	4024559385353	LT/Case, Fun II No_6110 Navigator

Model	Artikel-Nummer	EAN-Code	Bezeichnung
	LTNO6120CSWF	4024559385490	LT/Case, Fun II No_6120 Classic
	LTNO6151SWF	4024559384820	LT/Case, Fun II No_6151
	LTNO6210NSWF	4024559387265	LT/Case, Fun II No_6210 Navigator
	LTNO6210SWF2	4024559127977	LT/Case, Fun II No_6210/6310
	LTNO6220CSWF	4024559387012	LT/Case, Fun II No_6220 Classic
	LTNO6230SWF	4024559382529	LT/Case, Fun II No_6230
	LTNO6233SWF	4024559384561	LT/Case, Fun II No_6233_6234
	LTNO6260SWF	4024559387142	LT/Case, Fun II No_6260 Slide
	LTNO6267SWF	4024559385704	LT/Case, Fun II No_6267
	LTNO6270SWF	4024559383786	LT/Case, Fun II No_6270
	LTNO6280SWF	4024559384134	LT/Case, Fun II No_6280
	LTNO6300SWF	4024559385162	LT/Case, Fun II No_6300 / 6301
	LTNO6303SWF	4024559387845	LT/Case, Fun II No_6303(i)
	LTNO6500CSWF	4024559385957	LT/Case, Fun II No_6500 Classic
	LTNO6500SSWF	4024559383854	LT/Case, Fun II No_6500 Slide
	LTNO6555SWF	4024559385865	LT/Case, Fun II No_6555
	LTNO6600FSWF	4024559386824	LT/Case, Fun II No_6600 Fold
	LTNO6600SSWF	4024559386831	LT/Case, Fun II No_6600(i) Slide
	LTNO6600SWF	4024559382185	LT/Case, Fun II No_6600
	LTNO6630SWF	4024559383069	LT/Case, Fun II No_6630
	LTNO6700CSWF	4024559387906	LT/Case, Fun II No_6700 Classic
	LTNO6710NSWF	4024559387852	LT/Case, Fun II No_6710 Navigator
	LTNO6720CSWF	4024559387173	LT/Case, Fun II No_6720 Classic
	LTNO7070SWF	4024559386848	LT/Case, Fun II No_7070
	LTNO7280SWF	4024559385773	LT/Case, Fun II No_7280
	LTNO7310CSWF	4024559346880	LT/Case, Fun II No_7310 SuperNova
	LTNO7360SWF	4024559383960	LT/Case, Fun II No_7360
	LTNO7373SWF	4024559385100	LT/Case, Fun II No_7373
	LTNO7380SWF	4024559383922	LT/Case, Fun II No_7380
	LTNO8600SWF	4024559385322	LT/Case, Fun II No_8600
	LTNOC101SWF	4024559388682	LT/Case, Fun II No_C1-01
	LTNOC3SWF	4024559388392	LT/Case, Fun II No_C3
	LTNOC5SWF	4024559388521	LT/Case, Fun II No_C5
	LTNOC6SWF	4024559388620	LT/Case, Fun II No_C6
	LTNOE50SWF	4024559384301	LT/Case, Fun II No_E50
	LTNOE52SWF	4024559388644	LT/Case, Fun II No_E52
	LTNOE5SWF	4024559388637	LT/Case, Fun II No_E5
	LTNOE61SWF	4024559384349	LT/Case, Fun II No_E61
	LTNOE63SWF	4024559387395	LT/Case, Fun II No_E63
	LTNOE65SWF	4024559385278	LT/Case, Fun II No_E65
	LTNOE70SWF	4024559384585	LT/Case, Fun II No_E70
	LTNOE71SWF	4024559387890	LT/Case, Fun II No_E71
	LTNOE72SWF	4024559388651	LT/Case, Fun II No_E72
	LTNOE75SWF	4024559387876	LT/Case, Fun II No_E75
	LTNOE90SWF	4024559385537	LT/Case, Fun II No_E90
	LTNON70SWF	4024559384110	LT/Case, Fun II No_N-70/6680
	LTNON71SWF	4024559384325	LT/Case, Fun II No_N-71
	LTNON77SWF	4024559385315	LT/Case, Fun II No_N-77
	LTNON78SWF	4024559386862	LT/Case, Fun II No_N78
	LTNON79SWF	4024559387234	LT/Case, Fun II No_N79

Model	Artikel-Nummer	EAN-Code	Bezeichnung
	LTNON80SWF	4024559384318	LT/Case, Fun II No_N-80
	LTNON81SWF	4024559384615	LT/Case, Fun II No_N81/N81 8GB
	LTNON85SWF	4024559387319	LT/Case, Fun II No_N-85
	LTNON86SWF	4024559387883	LT/Case, Fun II No_N86
	LTNON8SWF	4024559388569	LT/Case, Fun II No_N8-00
	LTNON900SWF	4024559388415	LT/Case, Fun II No_N900
	LTNON93SWF	4024559384745	LT/Case, Fun II No_N-93
	LTNON96SWF	4024559386473	LT/Case, Fun II No_N-96
	LTNOX2SWF	4024559388668	LT/Case, Fun II No_X2
	LTNOX3SWF	4024559388385	LT/Case, Fun II No_X3
	LTNOX6SWF	4024559388675	LT/Case, Fun II No_X6
Samsung	LTSAB2100SWF	4024559513114	LT/Case, Fun II Sam_ B2100
	LTSAB5722SWF	4024559513350	LT/Case, Fun II Sam_ B5722
	LTSAC140SWF	4024559189715	LT/Case, Fun II Sam_ C140/C120/C130
	LTSAD780SWF	4024559511769	LT/Case, Fun II Sam_ D780
	LTSAE480SWF	4024559511349	LT/Case, Fun II Sam_ E480
	LTSAE590SWF	4024559511783	LT/Case, Fun II Sam_ E590
	LTSAE950SWF	4024559511790	LT/Case, Fun II Sam_ E950
	LTSAF210SWF	4024559511127	LT/Case, Fun II Sam_ F200, F210
	LTSAF300SWF	4024559189890	LT/Case, Fun II Sam_ F300
	LTSAF330SWF	4024559511134	LT/Case, Fun II Sam_ F330
	LTSAF400SWF	4024559512391	LT/Case, Fun II Sam_ F400
	LTSAF490SWF	4024559511448	LT/Case, Fun II Sam_ F490
	LTSAF700SWF	4024559511806	LT/Case, Fun II Sam_ F700
	LTSAG400SWF	4024559512414	LT/Case, Fun II Sam_ G400
	LTSAG600SWF	4024559651083	LT/Case, Fun II Sam_ G600
	LTSAG810SWF	4024559512438	LT/Case, Fun II Sam_ G810
	LTSAGMyX700SWF	4024559171642	LT/Case, Fun Sag_ MyX-700
	LTSAI450SWF	4024559511325	LT/Case, Fun II Sam_ i450
	LTSAI5500SWF	4024559513619	LT/Case, Fun Sam_ I5500 Galaxy 5
	LTSAI550SWF	4024559511158	LT/Case, Fun II Sam_ i550
	LTSAI560SWF	4024559511868	LT/Case, Fun II Sam_ i560
	LTSAI5800SWF	4024559513626	LT/Case, Fun Sam_ I5800 Galaxy 3
	LTSAI600SWF	4024559189661	LT/Case, Fun II Sam_ i600
	LTSAI7500SWF	4024559513183	LT/Case, Fun Sam_ I7500 Galaxy
	LTSAI780SWF	4024559513664	LT/Case, Fun II Sam_ i780
	LTSAI8000SWF	4024559513169	LT/Case, Fun Sam_ i8000 Omnia2
	LTSAI8510SWF	4024559512452	LT/Case, Fun II Sam_ i8510 Innov8
	LTSAI8910SWF	4024559512902	LT/Case, Fun II Sam_ i8910 Omina HD
	LTSAI9000SWF	4024559513633	LT/Case, Fun Sam_ I9000 Galaxy S
	LTSAI900SWF	4024559511905	LT/Case, Fun II Sam_ i900
	LTSAJ700SWF	4024559511363	LT/Case, Fun II Sam_ J700
	LTSAJ800SWF	4024559512094	LT/Case, Fun II Sam_ J800
	LTSAL700SWF	4024559513503	LT/Case, Fun II Sam_ L700
	LTSAL760SWF	4024559510854	LT/Case, Fun II Sam_ L760
	LTSAL870SWF	4024559511462	LT/Case, Fun II Sam_ L870
	LTSAM110SWF	4024559511295	LT/Case, Fun II Sam_ M110
	LTSAM300SWF	4024559189722	LT/Case, Fun II Sam_ M300
	LTSAM310SWF	4024559512070	LT/Case, Fun II Sam_ M310

Model	Artikel-Nummer	EAN-Code	Bezeichnung
	LTSAM3510SWF	4024559512698	LT/Case, Fun II Sam_ M3510
	LTSAMC170SWF	4024559189920	LT/Case, Fun II Sam_ C170/C180
	LTSAMD900SWF	4024559510557	LT/Case, Fun Sam_ D900/D900i/D900e
	LTSAMU600SWF	4024559189623	LT/Case, Fun II Sam_ U600
	LTSAMZ400SWF	4024559510649	LT/Case, Fun II Sam_ Z400
	LTSAMZM60SWF	4024559183133	LT/Case, Fun II Sam_ ZM60
	LTSAP520SWF	4024559511813	LT/Case, Fun II Sam_ P520 Armani
	LTSAS3500SWF	4024559512940	LT/Case, Fun II Sam_ S3500
	LTSAS3650SWF	4024559513190	LT/Case, Fun II Sam_ S3650 Corby
	LTSAS5200SWF	4024559513039	LT/Case, Fun II Sam_ S5200
	LTSAS5230SWF	4024559512926	LT/Case, Fun II Sam_ S5230 Star
	LTSAS5600SWF	4024559512919	LT/Case, Fun II Sam_ S5600 Preston
	LTSAS5620SWF	4024559513381	LT/Case, Fun II Sam_ S5620 Monte
	LTSAS7070SWF	4024559513374	LT/Case, Fun II Sam_ S7070 Diva
	LTSAS7350SWF	4024559512957	LT/Case, Fun II Sam_ S7350 UltraSlide
	LTSAS8000SWF	4024559513176	LT/Case, Fun Sam_ S8000 Jet
	LTSAU900SWF	4024559511837	LT/Case, Fun II Sam_ U900
	LTSAX160SWF	4024559189630	LT/Case, Fun II Sam_ X160
Sagem	LTSAX6DSWF	4024559171123	LT/Case, Fun II Sag_ MyX-6
Sony-Ericsson	LTSEC510SWF	4024559066399	LT/Case, Fun II Son_ C510
	LTSEC702SWF	4024559065651	LT/Case, Fun II Son_ C702
	LTSEELMSWF	4024559067112	LT/Case, Fun II Son_ Elm
	LTSEF100SWF	4024559067068	LT/Case, Fun II Son_ F100 Jalou
	LTSEG502SWF	4024559065637	LT/Case, Fun II Son_ G502
	LTSEG700SWF	4024559065811	LT/Case, Fun II Son_ G700
	LTSEG900SWF	4024559065842	LT/Case, Fun II Son_ G900
	LTSEJ220SWF	4024559064142	LT/Case, Fun II Son_ J220
	LTSEK300SWF	4024559063534	LT/Case, Fun II Son_ K300
	LTSEK530SWF	4024559065187	LT/Case, Fun II Son_ K530i
	LTSEK550SWF	4024559064661	LT/Case, Fun II Son_ K550i
	LTSEK610SWF	4024559064319	LT/Case, Fun II Son_ K610/V630
	LTSEK630SWF	4024559065217	LT/Case, Fun II Son_ K630i
	LTSEK660SWF	4024559065446	LT/Case, Fun II Son_ K660i
	LTSEK750SWF	4024559063640	LT/Case, Fun II Son_ K750
	LTSEK770SWF	4024559065248	LT/Case, Fun II Son_ K770i
	LTSEK810SWF	4024559064715	LT/Case, Fun II Son_ K810
	LTSEK850SWF	4024559065354	LT/Case, Fun II Son_ K850i
	LTSEP1iSWF	4024559064920	LT/Case, Fun II Son_ P1i
	LTSEP990SWF	4024559064494	LT/Case, Fun II Son_ P990
	LTSER306SWF	4024559066122	LT/Case, Fun II Son_ R306
	LTSES500SWF	4024559064784	LT/Case, Fun II Son_ S500i
	LTSET250SWF	4024559065293	LT/Case, Fun II Son_ T250i/T280i
	LTSET303SWF	4024559066245	LT/Case, Fun II Son_ T303
	LTSET700SWF	4024559066108	LT/Case, Fun II Son_ T700
	LTSET707SWF	4024559066368	LT/Case, Fun II Son_ T707
	LTSEU100SWF	4024559067051	LT/Case, Fun II Son_ U100 Yari
	LTSEU1SWF	4024559067044	LT/Case, Fun II Son_ U1 Saito
	LTSEVIVAZSWF	4024559067105	LT/Case, Fun II Son_ U5 Vivaz/Kuara

Model	Artikel-Nummer	EAN-Code	Bezeichnung
	LTSEW200SWF	4024559064890	LT/Case, Fun II Son_ W200i
	LTSEW302SWF	4024559066085	LT/Case, Fun II Son_ W302
	LTSEW350SWF	4024559065873	LT/Case, Fun II Son_ W350
	LTSEW380SWF	4024559065422	LT/Case, Fun II Son_ W380i
	LTSEW508SWF	4024559066375	LT/Case, Fun II Son_ W508
	LTSEW580SWF	4024559064906	LT/Case, Fun II Son_ W580i
	LTSEW595SWF	4024559066146	LT/Case, Fun II Son_ W595
	LTSEW610SWF	4024559064722	LT/Case, Fun II Son_ W610
	LTSEW710SWF	4024559364488	LT/Case, Fun II Son_ W710i
	LTSEW715SWF	4024559066382	LT/Case, Fun II Son_ W715
	LTSEW760SWF	4024559065675	LT/Case, Fun II Son_ W760
	LTSEW800SWF	4024559063831	LT/Case, Fun II Son_ W800/W700/D750
	LTSEW810iSWF	4024559064159	LT/Case, Fun II Son_ W810i
	LTSEW880SWF	4024559064685	LT/Case, Fun II Son_ W880i
	LTSEW890SWF	4024559065576	LT/Case, Fun II Son_ W890i
	LTSEW902SWF	4024559066160	LT/Case, Fun II Son_ W902
	LTSEW910iSWF	4024559064340	LT/Case, Fun II So/Er_ W910i
	LTSEW960iSWF	4024559064814	LT/Case, Fun II Son_ W960i
	LTSEW980SWF	4024559065408	LT/Case, Fun II Son_ W980i
	LTSEX10SWF	4024559067129	LT/Case, Fun II Son_ X10
	LTSEX2SWF	4024559067136	LT/Case, Fun II Son_ X2
	LTSEZ310SWF	4024559065088	LT/Case, Fun II Son_ Z310
	LTSEZ320SWF	4024559065132	LT/Case, Fun II Son_ Z320
	LTSEZ555SWF	4024559065491	LT/Case, Fun II Son_ Z555
	LTSEZ710iSWF	4024559064449	LT/Case, Fun II Son_ Z710i
	LTSEZ777SWF	4024559065507	LT/Case, Fun II Son_ Z770
Siemens	LTSIA65SWF	4024559196225	LT/Case, Fun II Si_ A65/A70/AX75/A75
	LTSICF61SWF	4024559197307	LT/Case, Fun II Si_ CF61
	LTSISC55SWF2	4024559194672	LT/Case, Fun II Si_ C/A/M/S55/A52/A57