

Bluetooth Mini Keyboard



Quick Install Guide

Table of Contents

- ◆ **BK300 Quick Install Guide** 3
- ◆ **Pocket PC / Microsoft Smartphone** 4
 - System Requirements 4
 - Before to use 4
 - How to Install the Bluetooth Mini keyboard driver 4
- ◆ **Palm OS Device** 5
 - System Requirements 5
 - Before to use 5
 - How to Install the Mini Bluetooth keyboard driver 5
- ◆ **Symbian Series 60 OS Device** 6
 - System requirements 6
 - Before to use 6
 - How to Install the Mini Bluetooth keyboard driver 6
- ◆ **Symbian UIQ OS Device** 9
 - System requirements 9
 - Before to use 9
 - How to Install the Mini Bluetooth keyboard driver 9
- ◆ **Windows 2000 / XP OS Device** 11
 - System requirements 11
 - Before to use 11
 - How to Install the Mini Bluetooth keyboard driver 11

BK300 Quick Install Guide

This application will build up the interaction of your mobile device and this Bluetooth Mini keyboard. Please follow below instruction step by step for the application installation.

For more detail instruction for different mobile device or troubleshooting , please refer to the electronic User's Manual located on the CD-ROM.

Pocket PC / Microsoft Smartphone

➤ **System Requirements**

- Microsoft Pocket PC 2003 / Windows Mobile 5.0 with built-in Bluetooth.
- At least 420 KB of free memory on your Pocket PC.
- A computer with the Microsoft Windows 2000 / XP operating system.
- A synchronizing program on your computer, such as Microsoft ActiveSync 3.6 or higher, for copying files to your Pocket PC.

➤ **Before to Use**

- Check the batteries status of Bluetooth Mini keyboard.
(Turn the switch on to check the Blue light on the keyboard.)
- Disable other application which will use Bluetooth port on your mobile device.

➤ **How to Install the Bluetooth Mini keyboard Driver?**

■ **Installation**

- Connect your Microsoft Pocket PC 2003 through infrared / cable /bluetooth for ActiveSync with the computer.
- Insert Bluetooth Universal Keyboard CD into computer's CD-ROM drive.
- Follow the instruction on screen to complete the installation.
- After the Mini Bluetooth keyboard driver is installed successfully and the Microsoft Pocket PC is reset, you can find the Bluetooth Mini keyboard icon is showed on the Start Menu of the Pocket PC. (Figure 1)



Figure 1

Palm OS Device

➤ **System Requirements**

- Palm OS device with built-in Bluetooth.
- At least 50 KB of free memory on your Palm OS device.
- A computer with the Microsoft Windows 2000 / XP operating system.
- A synchronizing program on your computer, such as Palm™ Desktop Software, for copying files to your Palm OS device.

➤ **Before to Use**

- Check the batteries status of Bluetooth Mini keyboard.
(Turn the switch on to check the Blue light on the keyboard.)
- Disable other application which will use Bluetooth port on your mobile device

➤ **How to Install the Bluetooth Mini keyboard Driver ?**

■ **Installation**

- Insert Bluetooth Universal Keyboard CD into computer's CD-ROM drive.
- After the installation is done, the Bluetooth Mini keyboard driver has been copied to HotSync Manager on your computer.
- Make sure the cradle / cable has already connected with your computer, it should synchronize to copy the driver to your Palm OS device after running the HotSync software in your Palm OS device.

- After the Bluetooth Mini keyboard driver is installed successfully, you can find this Bluetooth keyboard icon is showed on the Home list of the Palm OS device.



(Figure 2)

Symbian Series 60 OS Device

➤ **System requirements**

- Symbian Series 60 Smartphone.
- At least 100 KB free memory on your Smartphone.
- A computer with the Microsoft Windows 2000 / XP operating system.
- PC Suite (available on one of the CDs delivered with your phone).

➤ **Before to Use**

- Check the batteries status of Bluetooth Mini keyboard.
(Turn the switch on to check the Blue light on the keyboard.)
- Disable other application which will use Bluetooth port on your mobile device.

➤ **How to Install the Bluetooth Mini keyboard Driver?**

For Symbian Series 60 OS, the Bluetooth Mini keyboard driver can be installed by AutoRun CD-ROM, PC Suite and Wireless file transfer (Infrared or Bluetooth). Please find the details as below information.

(When the Smartphone receive the file, it will show message with file "BTkeybd.sis", click " View". You will be warned that "Application is untrusted and may have problems. Install only if you trust provider." Click "Yes", then click "Install".)

Install the Application in Series60 OS Smartphone by AutoRun CD-ROM

- 1 Establish the connection between your computer and your Smartphone.
- 2 Insert Bluetooth Universal Keyboard CD into computer's CD-Rom drive.
- 3 Follow the instruction on screen to complete the installation.
- 4 When the installation is finished, you can find this Bluetooth Mini keyboard icon is showed on the Menu of the mobile device.

B-Speech® MiniPad Quick Install Guide

- **Install the Application in Series60 Smartphone by “Application installer” of PC Suite**
- 1 Tag the PC Suite on the screen of the laptop/desktop, then click “**Install applications**” icon. (Figure 3)

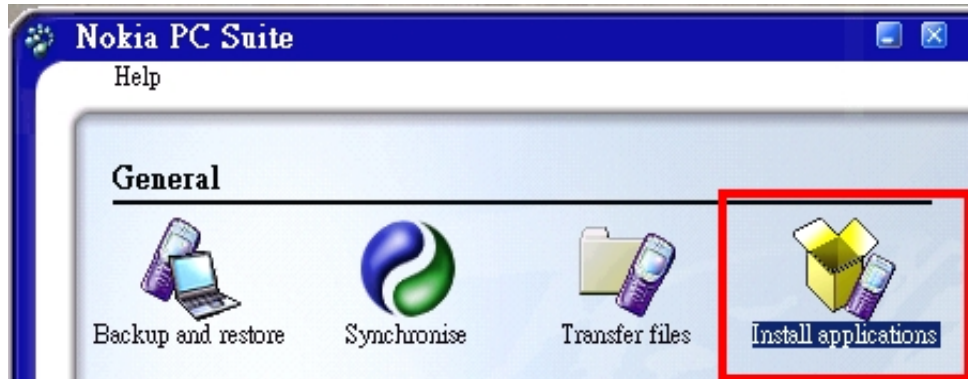


Figure 3

- 2 In the Application installer, from “My Computer” side, **Path**: CD-Rom driver » Files » Symbian » Series60 » Language. (Figure 4)

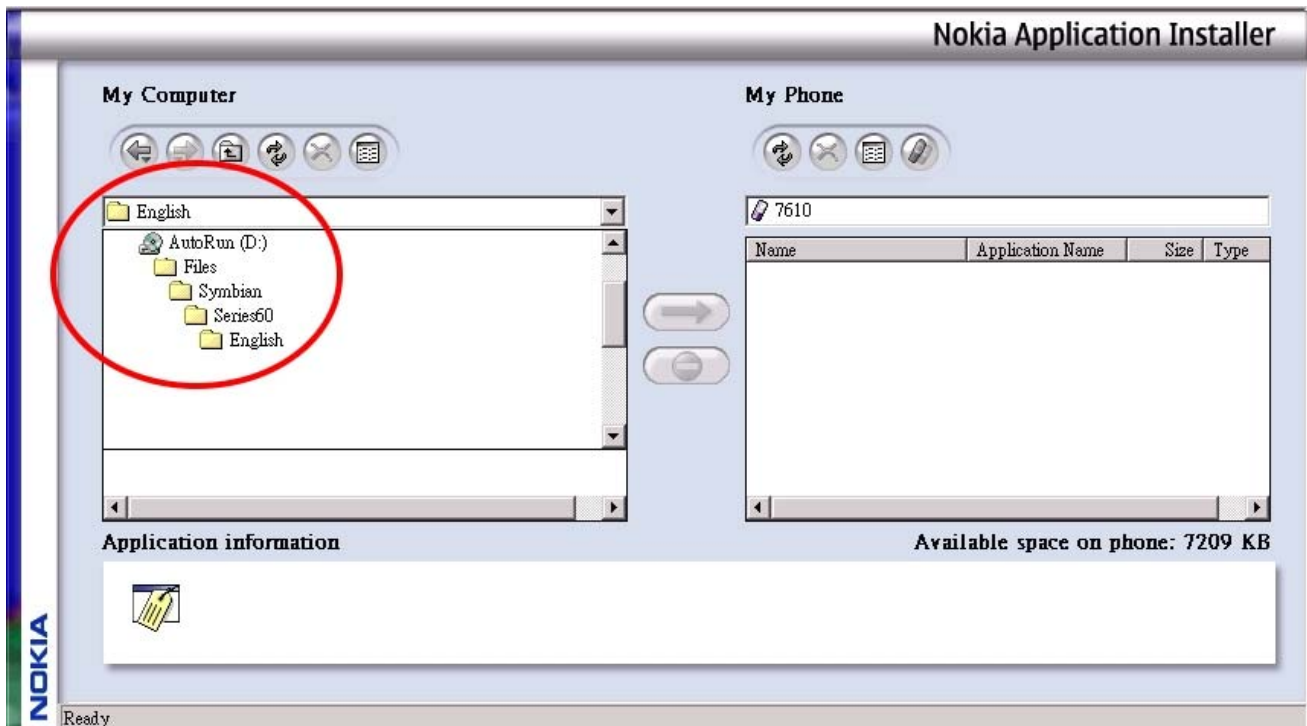


Figure 4

- 3 Find the file “**MiniKB.sis**”, then tag the install.

B-Speech® MiniPad Quick Install Guide

- **Install the Application in Symbian Series 60 Smartphone by Infrared or Bluetooth file Transfer**
 - 1 Disable applications or drivers in the Smartphone, which may use Infrared or Bluetooth ports.
 - 2 Path: CD-Rom driver » Files » Symbian » Series60 » Language. Tag the file "**MiniKB.sis**" on your computer or CD-ROM.
 - 3 Follow the instructions for the Infrared or Bluetooth software on your computer to located the Series60 OS Smartphone and transfer the file to it.

- After the driver is installed successfully ,the keyboard driver icon will show up in the main menu. (Figure 5)



Figure 5

Symbian UIQ OS Device

➤ **System requirements**

- Symbian UIQ Smartphone.
- At least 100 KB free memory on your Smartphone.
- A computer with the Microsoft Windows 2000 / XP operating system.
- PC Suite (available on one of the CDs delivered with your phone).

➤ **Before to Use**

- Check the batteries status of Bluetooth Mini keyboard.
(Turn the switch on to check the Blue light on the keyboard.)
- Disable other application which will use Bluetooth port on your mobile device.

➤ **How to Install the Bluetooth Mini keyboard Driver ?**

For Symbian UIQ OS, the Bluetooth Mini keyboard driver can be installed by AutoRun CD-ROM, PC Suite and Wireless file transfer (Infrared or Bluetooth). Please find the details as below information.

(When the Smartphone receive the file, it will show message with file "BTkeybd.sis", click " View". You will be warned that "The identity of the software supplier cannot be guaranteed. Do you want to proceed?" Click "Yes", then click "Install".)

Install the Application in Symbian UIQ Smartphone by AutoRun CD-ROM

- 5 Establish the connection between your computer and your Smartphone.
- 6 Insert Bluetooth Universal Keyboard CD into computer's CD-Rom drive.
- 7 Follow the instruction on screen to complete the installation.
- 8 When the installation is finished, you can find this Bluetooth Mini keyboard icon is showed on the Menu of the mobile device.

B-Speech® MiniPad Quick Install Guide

- **Install the Application in Symbian UIQ Smartphone by “Application installer” of PC Suite**
 1. PC Suite (available on one of the CDs delivered with your phone) must be installed in your PC, and the Smartphone must be connected to the PC via SyncStation.
 2. Start the software “**Install Software**” on your PC (can be found under Programs > Sony Ericsson > P800/P900/P910), and select the application (Path: CD-Rom driver » Files » Symbian » UIQ » Language » MiniKB.sis) to install.
- **Install the Application in Symbian UIQ Smartphone by Infrared or Bluetooth file Transfer**
 4. Disable applications or drivers in the Smartphone, which may use Infrared or Bluetooth ports.
 5. Path: CD-Rom driver » Files » Symbian » UIQ » Language. Tag the file “**MiniKB.sis**” on your computer’s CD-ROM.
 6. Follow the instructions for the Infrared or Bluetooth software on your computer to located the Smartphone and transfer the file to it.
- After the driver is installed successfully ,the keyboard driver icon will show up in the main menu. (Figure 6)

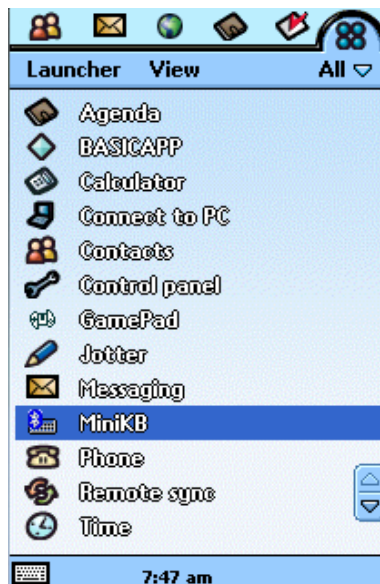


Figure 6

Windows 2000 / XP OS Device

➤ **System Requirements**

- A computer with the Microsoft Windows 2000 / XP operating system.
- At least 4 MB free memory on your PC.
- Determine that your PC is Bluetooth-enabled with either a built-in Bluetooth component, or via an external hardware adaptor (Dongle)

➤ **Before Use**

- Push the power switch to leftward for HID mode and blue light on the keyboard(Fig 1).



Fig 1

- Please turn the software off which is using Bluetooth Serial Port Profile of your PC.
- Ensure that the accompanying Bluetooth software (Stack) is installed.
 1. If your PC is running Windows XP Service Pack 2(SP2)□the Microsoft Bluetooth Software is built-in. You don't need other Bluetooth Software□
 2. If your PC is running Windows 2000 OS□then please install **WIDCOMM** (**Broadcom**) or **BlueSoleil** (**IVT**) Bluetooth Software first□

➤ **Search, Pair and Use the Bluetooth Mini keyboard**

Use the Bluetooth of the PC/NB to search the Bluetooth Mini Keyboard. Once the connection is built up between the PC/NB and the Mini Keyboard, then you can start to use the keyboard to input data.

➤ **Disable HID Bluetooth Keyboard IP Code :**

- A.** Bluetooth Mini Keyboard HID Mode will auto-memorize the IP code of the PC when the Bluetooth connection built up. Then the BK300 is connectable and discoverable by this PC only. If you want to build up the Bluetooth connection with other PC, you should disable the Bluetooth IP code of the Bluetooth Mini Keyboard first .
- B.** How to Disable the Bluetooth IP code :

Please press below 3 keys **in sequence**.



When you press these 3 keys at same time, the Bluetooth connection will be interrupted. It means the Bluetooth IP code is disabled and the Mini keyboard will be discoverable and connectable by other PC.